


- CZ** Návod k instalaci a k použití
- DK** Monterings- og betjeningsvejledning
- E** Instrucciones de montaje y de manejo
- F** Instructions de montage et mode d'emploi
- GB** Installation and operating instructions
- H** Szerelési és használati utasítás
- I** Istruzioni di montaggio e per l'uso
- NL** Montagehandleiding en Gebruiksaanwijzing
- NO** Monterings- og bruksanvisning
- P** Manual de montagem e utilização
- PL** Instrukcja montażu i obsługi
- RU** Руководство по монтажу и эксплуатации
- S** Installations- och skötselanvisning
- SK** Návod na montáž a obsluhu

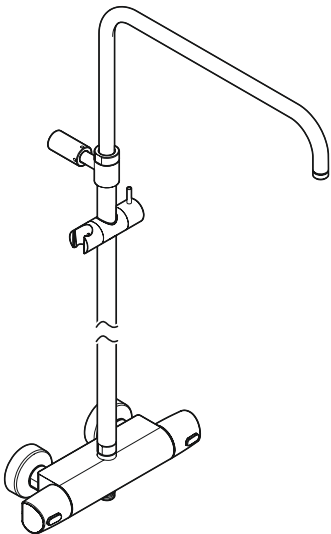

DEDSO / SM

DIN EN 806
DIN EN 1717
DIN 1988
Global Standards

i
VIGOUR
Montage und
Bedienungsanleitung

XXXX

1 2 3 4 5 6 7
8 9 10 11 12 13 14
15 16 17 18 19 20 21
22 23 24 25 26 27 28
29 30 31

VIGOUR GmbH
Bergholzstraße 3
D-12099 Berlin

www.vigour.de

VIGOUR

! °C / °F
max. 70 °C / 158 °F
✓ 60 °C / 140 °F
min. 10 °C / 50 °F

✓ 3 bar / 43,5 psi
min. 1 bar / 14,5 psi
max. 10 bar / 145 psi

3 min.

max. 70 °C / 158 °F

>15 mm
≥ 2 x D
>20 mm

1. 150 mm 1

2. 35-40 mm 4

3. 3a 3b

