




- CZ** Návod k instalaci a k použití
- E** Instrucciones de montaje y de manejo
- F** Instructions de montage et mode d'emploi
- GB** Installation and operating instructions
- H** Szerelési és használati utasítás
- I** Istruzioni di montaggio e per l'uso
- NL** Montagehandleiding en Gebruiksaanwijzing
- NO** Monterings- og bruksanvisning
- PL** Instrukcja montażu i obsługi
- RU** Руководство по монтажу и эксплуатации
- SK** Návod na montáž a obsluhu

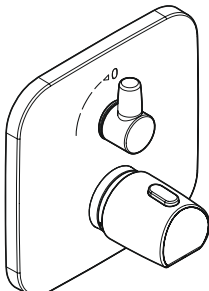


DEFTM

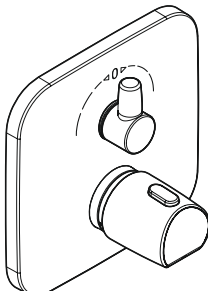


DEFTMU

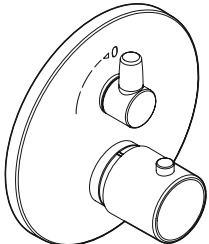


CLIVIAFTM

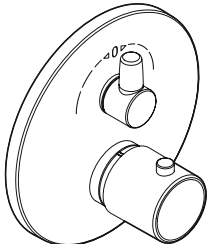

CLIVIAFTMU

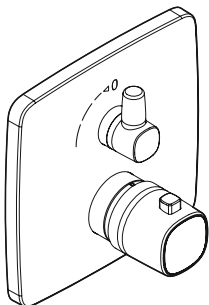

WHITENFTM

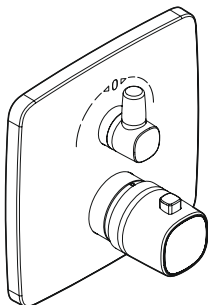

WHITENFTMU

DIN EN 806
DIN EN 1717
DIN 1988
Global Standards

i
VIGOUR
Montage- und
Bedienanleitung

VIGOUR GmbH
Bergholzstraße 3
D-12099 Berlin

www.vigour.de

VIGOUR

9 62 917/01

! max. 70 °C / 158 °F
✓ 60 °C / 140 °F

✓ 3 bar / 43,5 psi
min. 1 bar / 14,5 psi
max. 10 bar / 145 psi

3 min.

max. 70 °C / 158 °F

> 15 mm

> 20 mm

1.

2.

3.

4.

5.

