




- CZ** Návod k instalaci a k použití
- DK** Monterings- og betjeningsvejledning
- E** Instrucciones de montaje y de manejo
- F** Instructions de montage et mode d'emploi
- GB** Installation and operating instructions
- H** Szerelési és használati utasítás
- I** Istruzioni di montaggio e per l'uso
- NL** Montagehandleiding en Gebruiksaanwijzing
- NO** Monterings- og bruksanvisning
- P** Manual de montagem e utilização
- PL** Instrukcja montażu i obsługi
- RU** Руководство по монтажу и эксплуатации
- S** Installations- och skötselanvisning
- SK** Návod na montáž a obsluhu

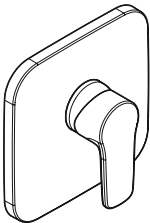


DEFB

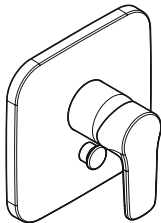

DEFW

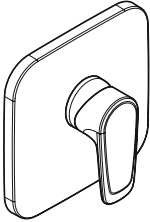


DESFB / SM

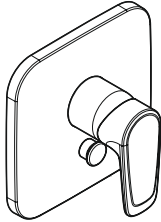


DESW / SM



CLFB

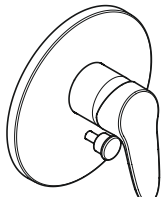


CLFW

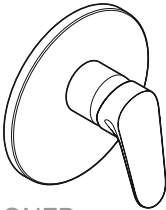


ONFB



ONFBW

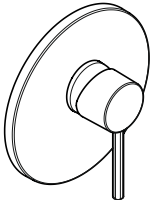

GRFB
GRFBSM

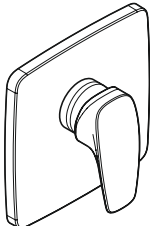

WHITENFB



WHITENFW

DIN EN 806
DIN EN 1717
DIN 1988
Global Standards

VIGOUR
Montage und
Bedienanleitung

°C / °F

max. 70 °C / 158 °F

✓ 60 °C / 140 °F

min. 10 °C / 50 °F

✓ 3 bar / 43,5 psi

min. 1 bar / 14,5 psi

max. 10 bar / 145 psi

3 min.

max. 70 °C / 158 °F

>15 mm

≥ 2 x D

D

>15 mm

>20 mm

