


VIGOUR


Die Marke für das ganze Bad


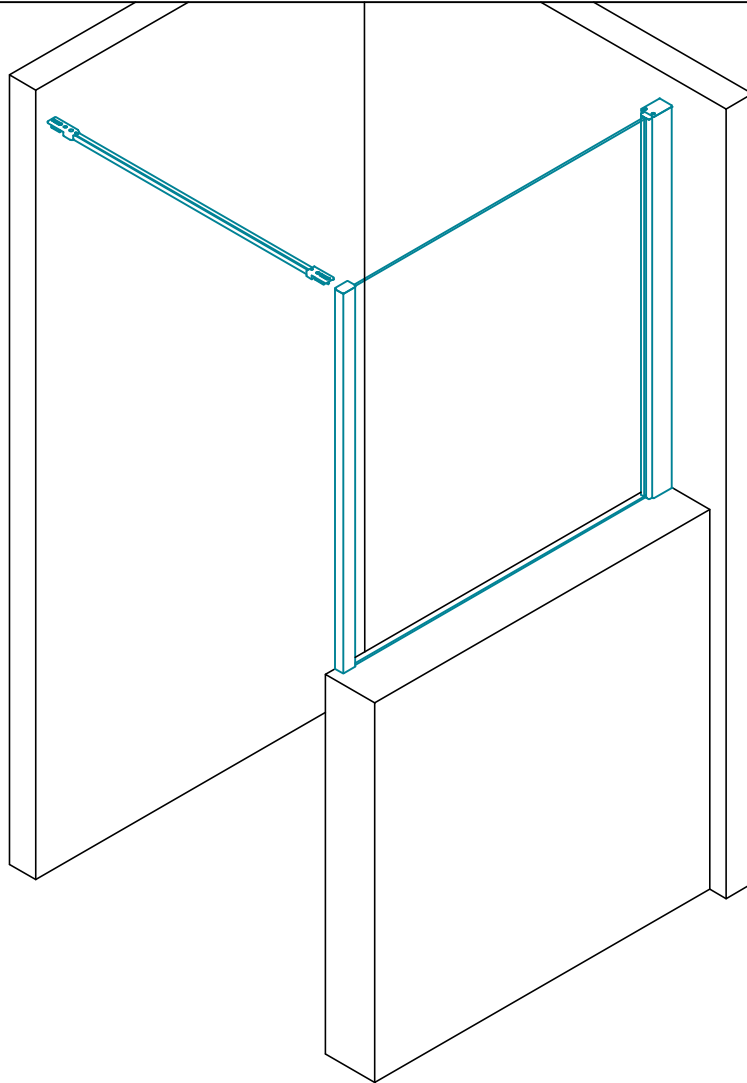


VIGOUR V3
Duschabtrennungen
Shower enclosures



V32FPSKS1


19924 V1

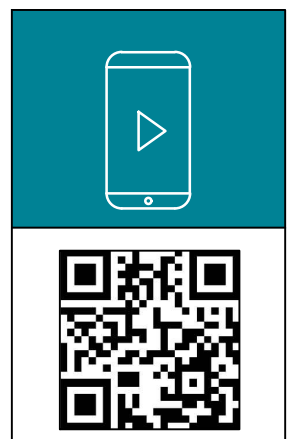

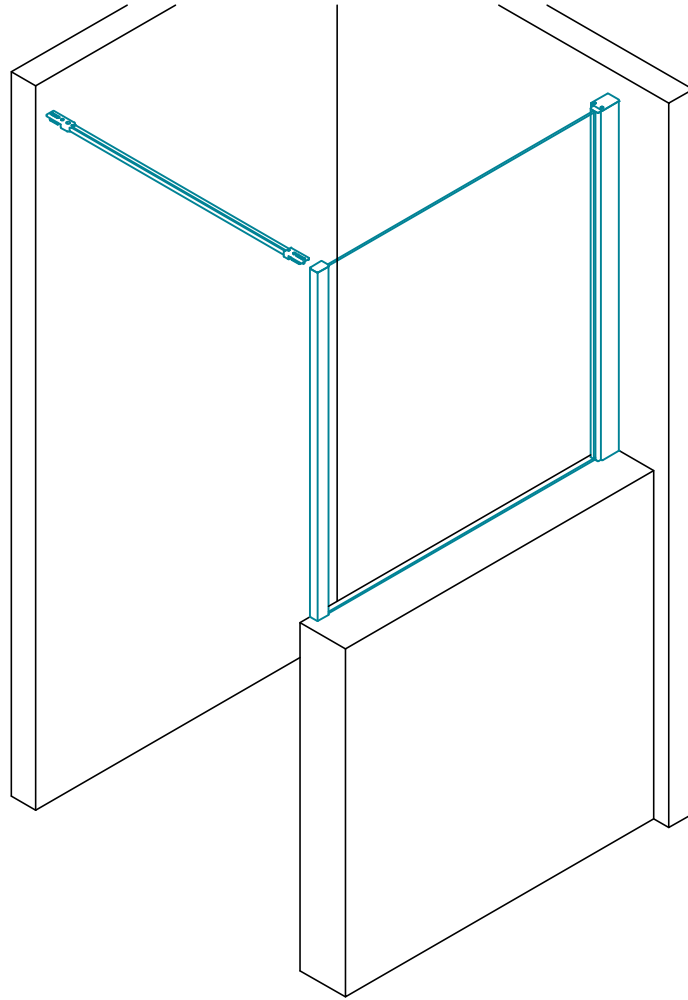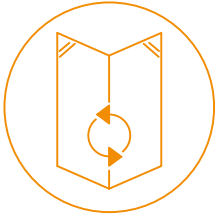



<p>99</p>	<p>1</p>	<p>2</p>	<p>11</p>		<p>43</p>		
			<p>17</p>	<p>18</p>	<p>43-1</p> <p>3x Ø 6 mm</p>	<p>43-2</p> <p>3x 4.2 x 32 mm</p>	
			<p>21</p>			<p>43-6</p>	<p>43-7</p> <p>3x 4.2 x 9.5 mm</p>
					<p>43-8</p> <p>2x 3.5 x 13 mm</p>	<p>43-9</p> <p>1x 3.5 x 16 mm</p>	
					<p>43-10</p>	<p>2 mm</p>	

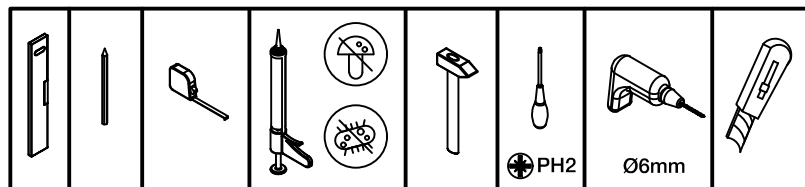

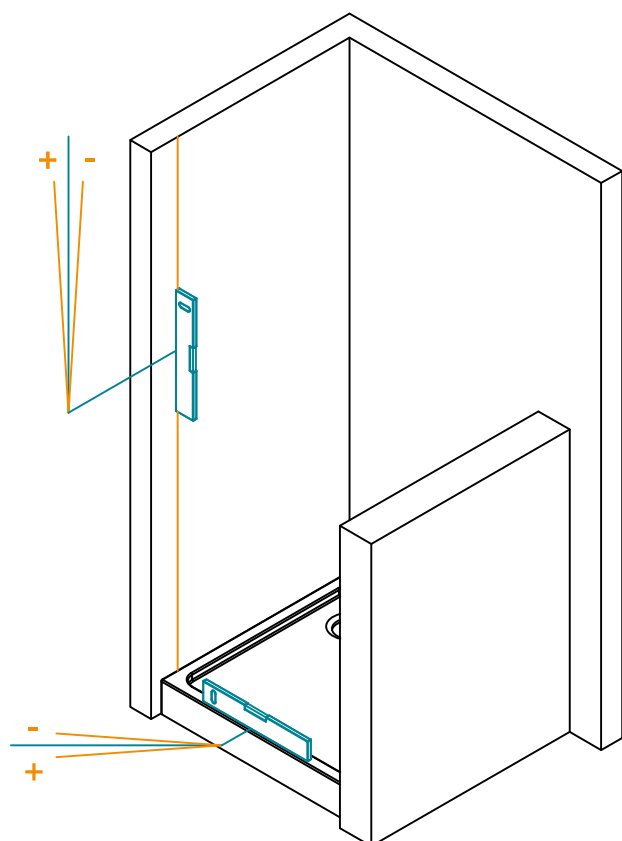

Einbaumaß Wanne (EBW)
Installation dimension shower tray (EBW)


$$\mathbf{EBW}_{\text{Min}} \leq \mathbf{X} \geq \mathbf{EBW}_{\text{Max}}$$

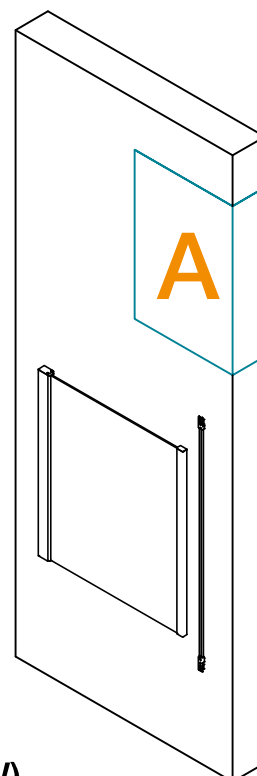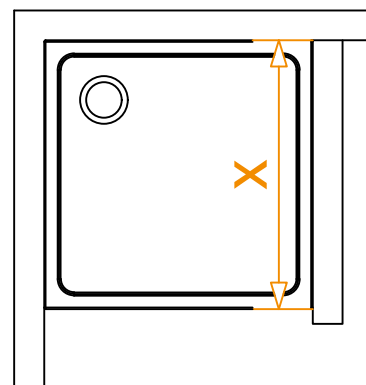

1.



A SM (-10 ; +20)

A	EBW / EBG
EX : 863	853 - 883

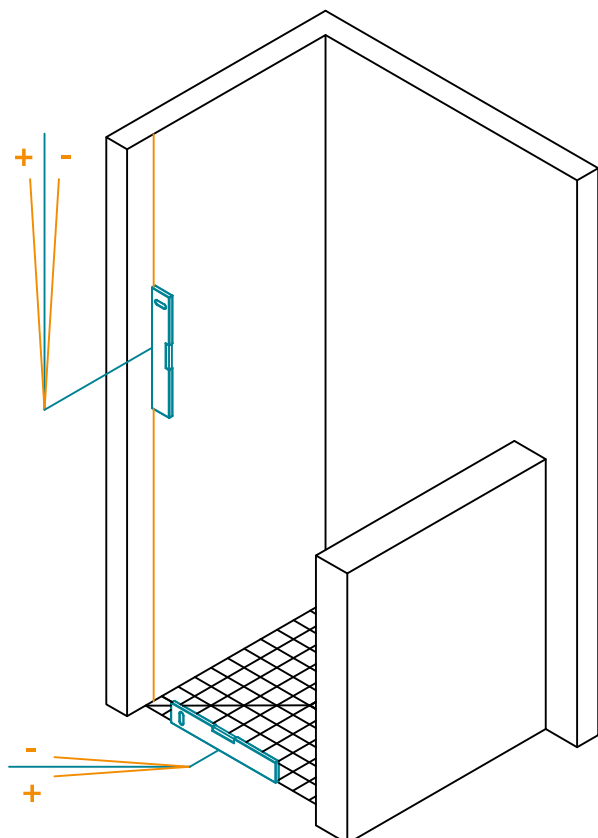


Bodenmontage Glasmitte (EBG)
Floor mounting, center of glass (EBG)

$$\mathbf{EBG}_{\text{Min}} \leq \mathbf{X} \geq \mathbf{EBG}_{\text{Max}}$$

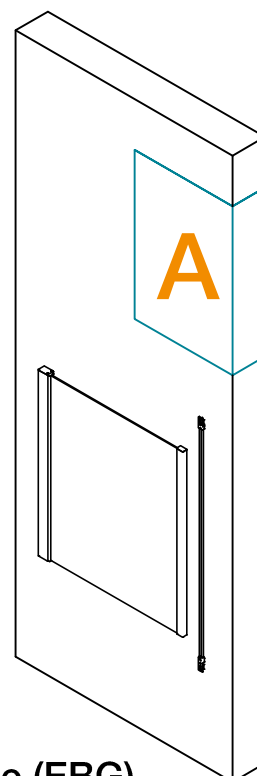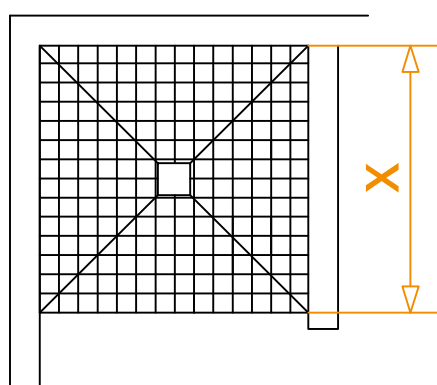


4







2.

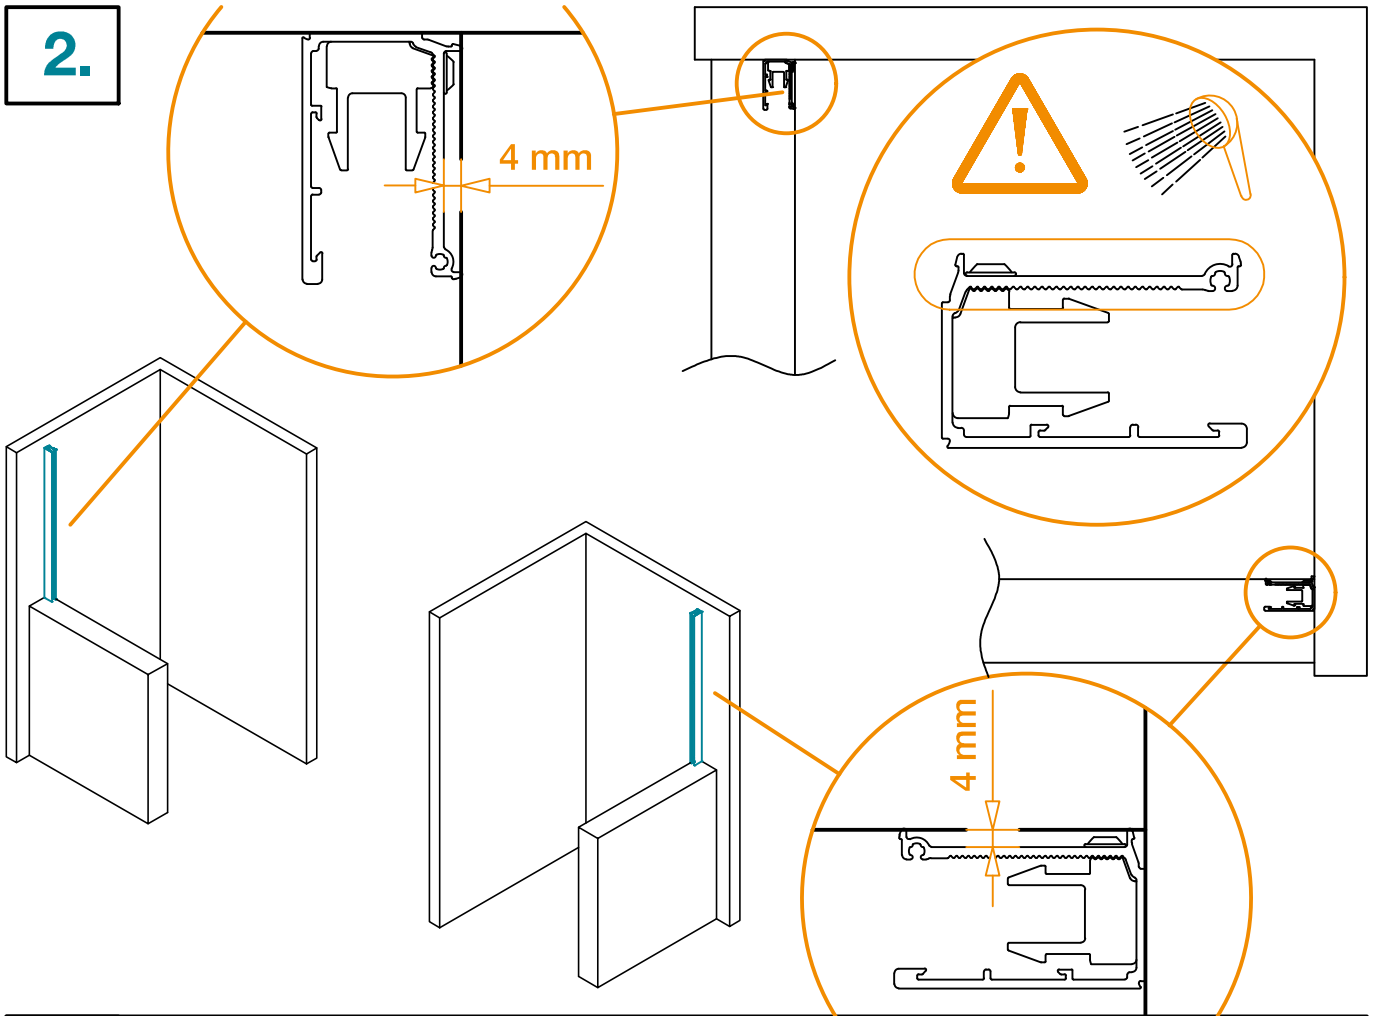





3.

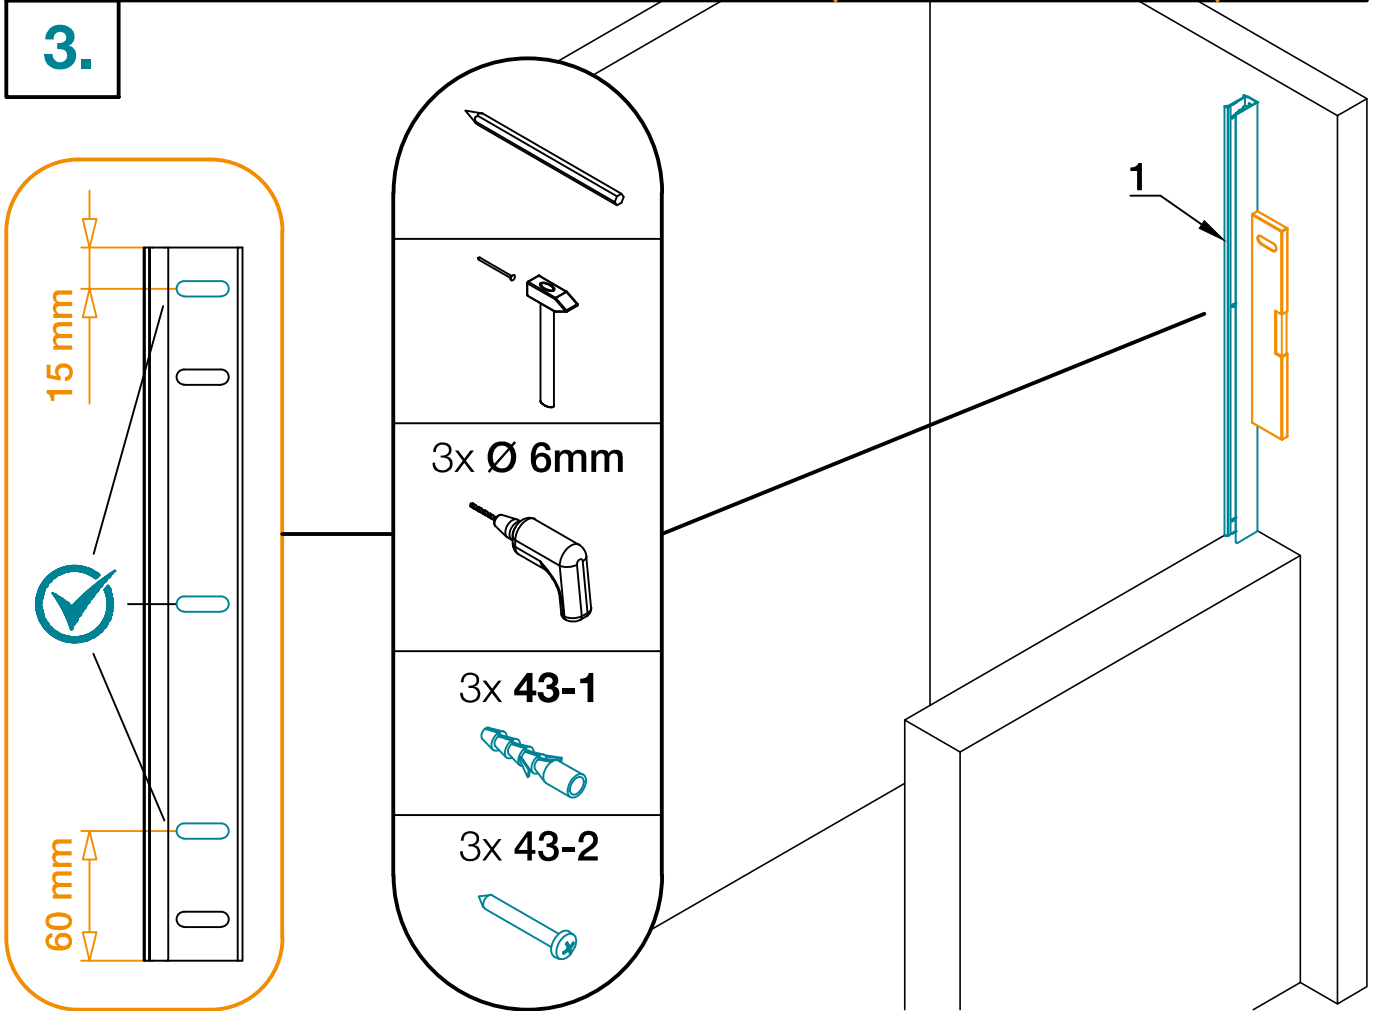



4.1 → 4.3

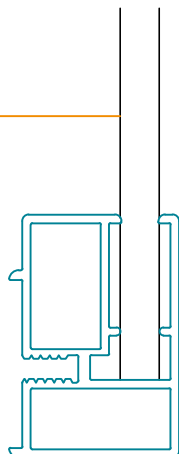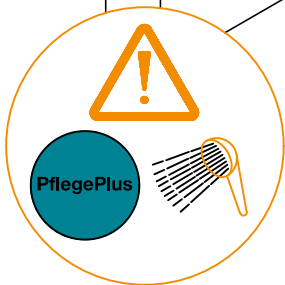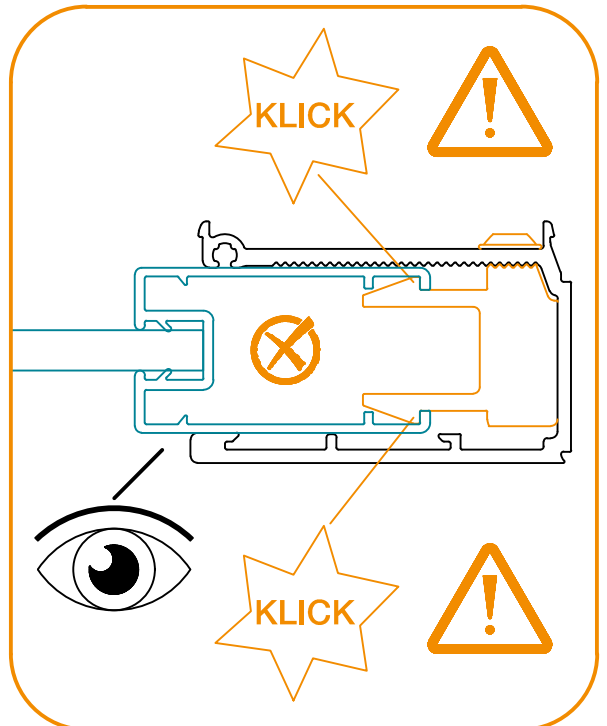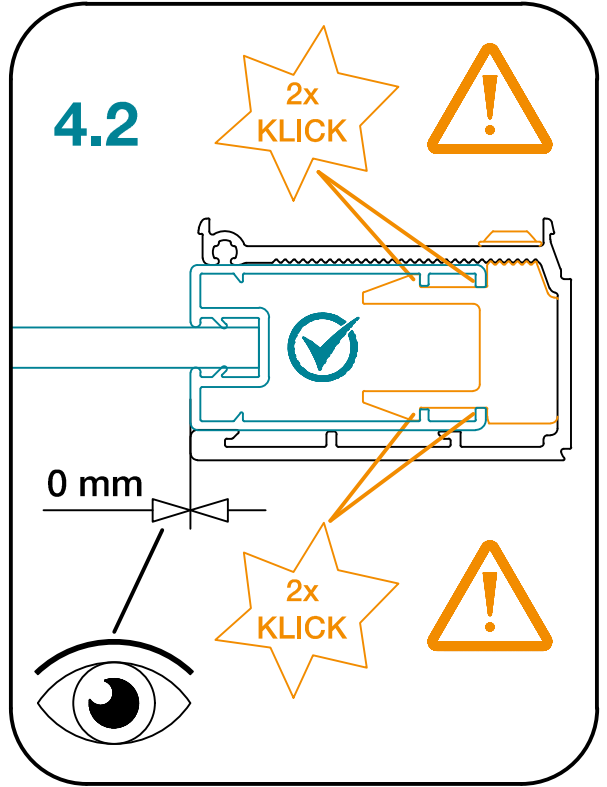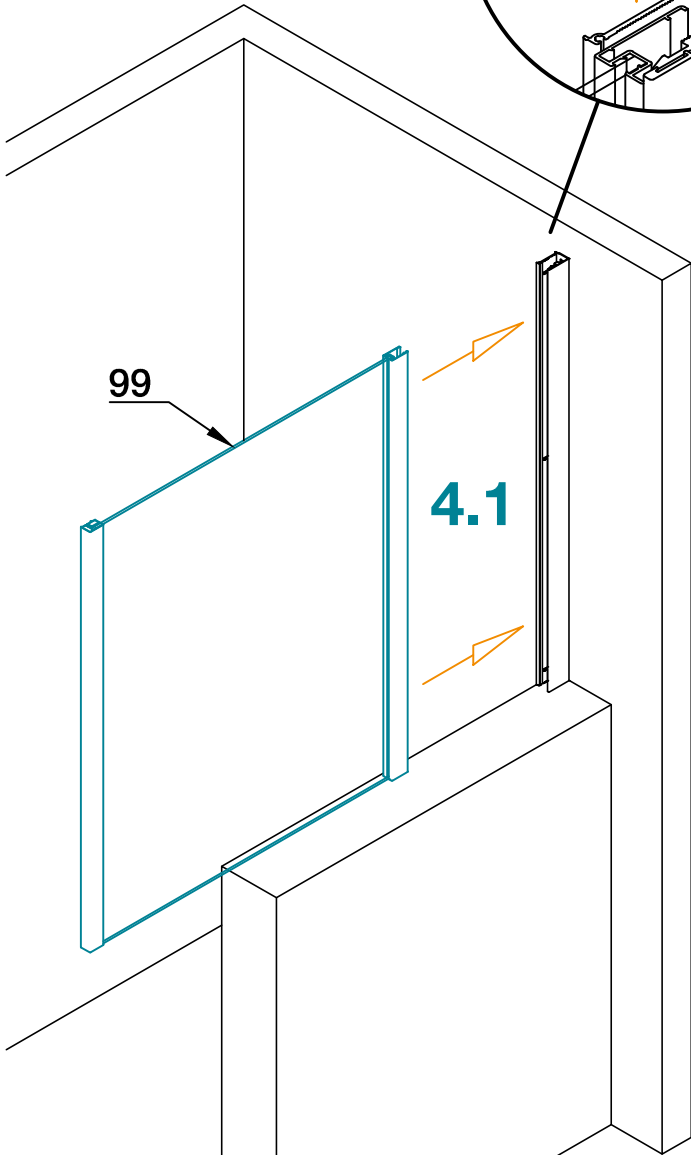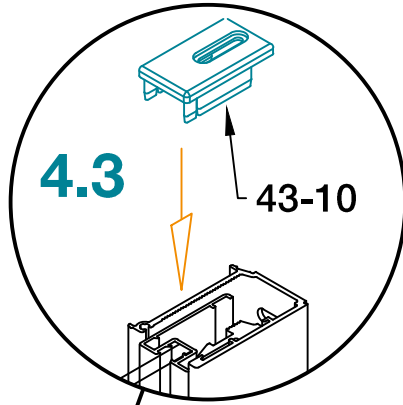



5.1 → 5.2

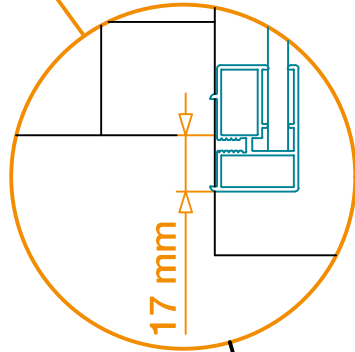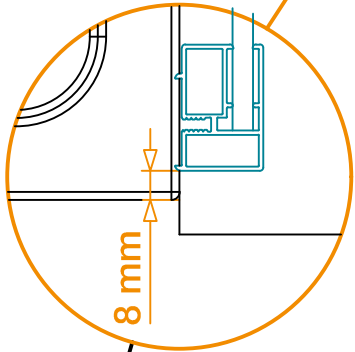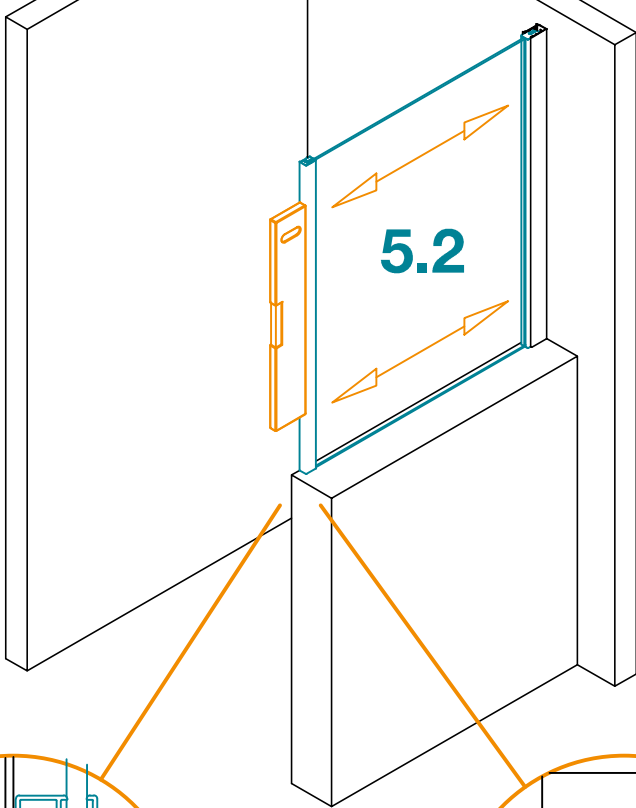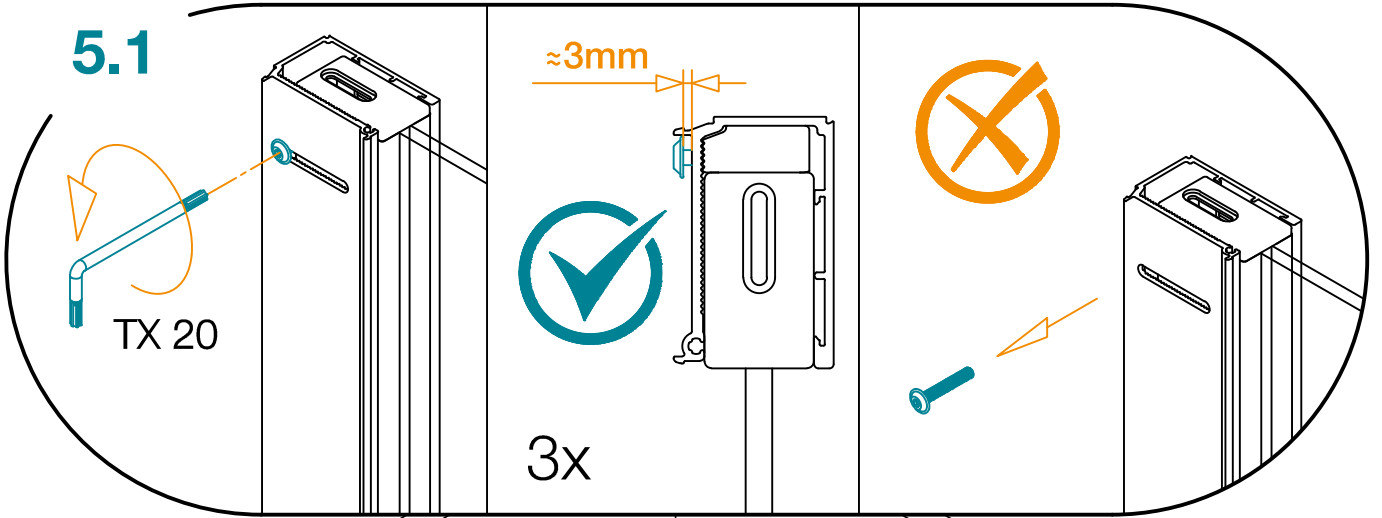





?

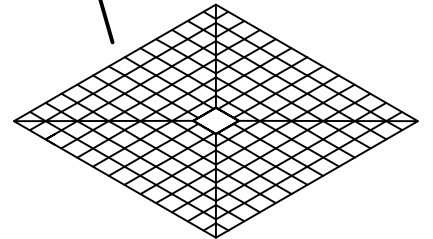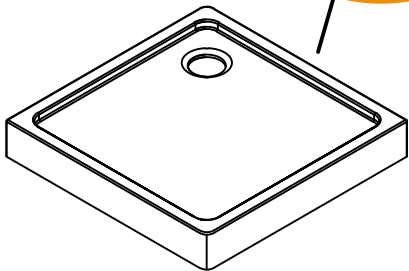


6.1 → 6.3

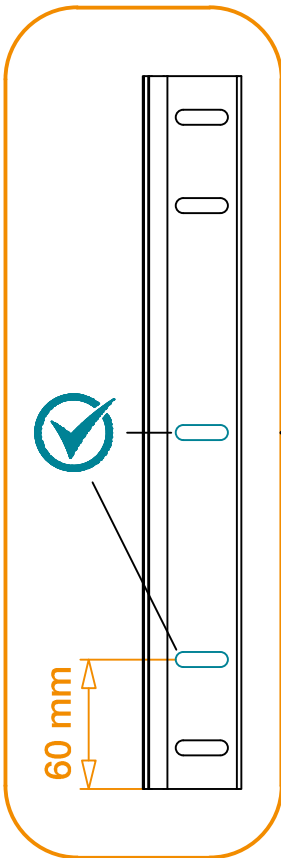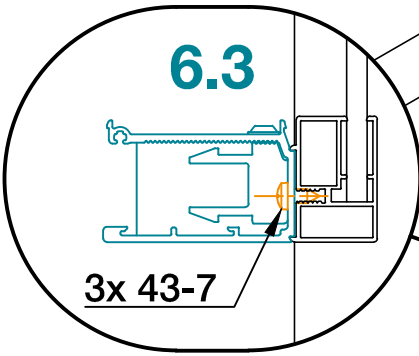



- 6.2
- ✎
 - 🔧
 - 2x Ø 6mm
 - 🔩
 - 2x 24-2
 - 🔩
 - 2x 24-1
 - 🔩

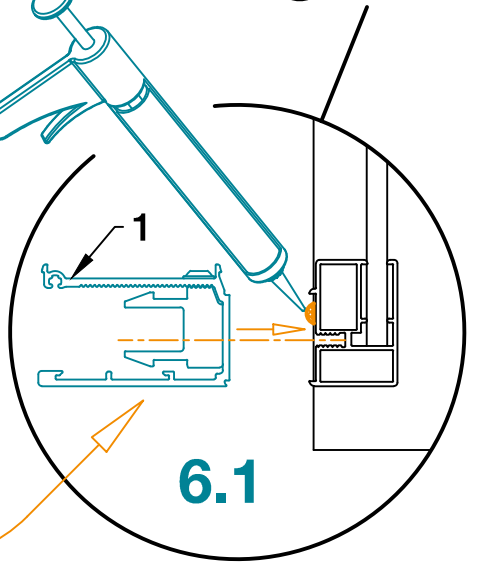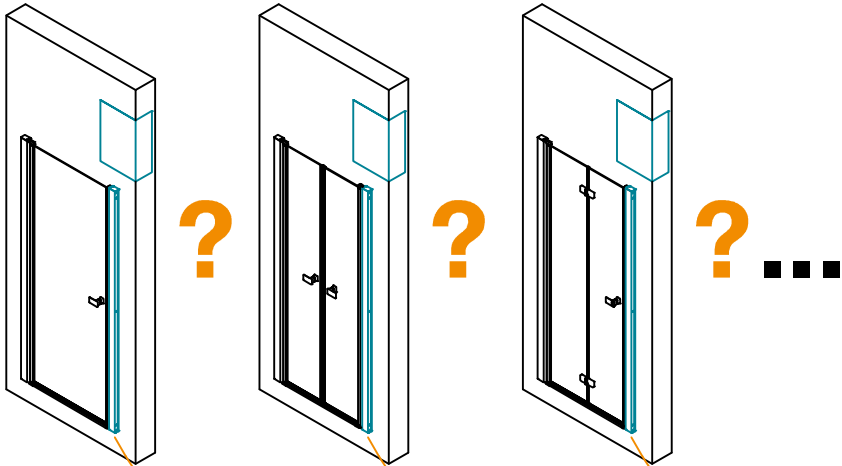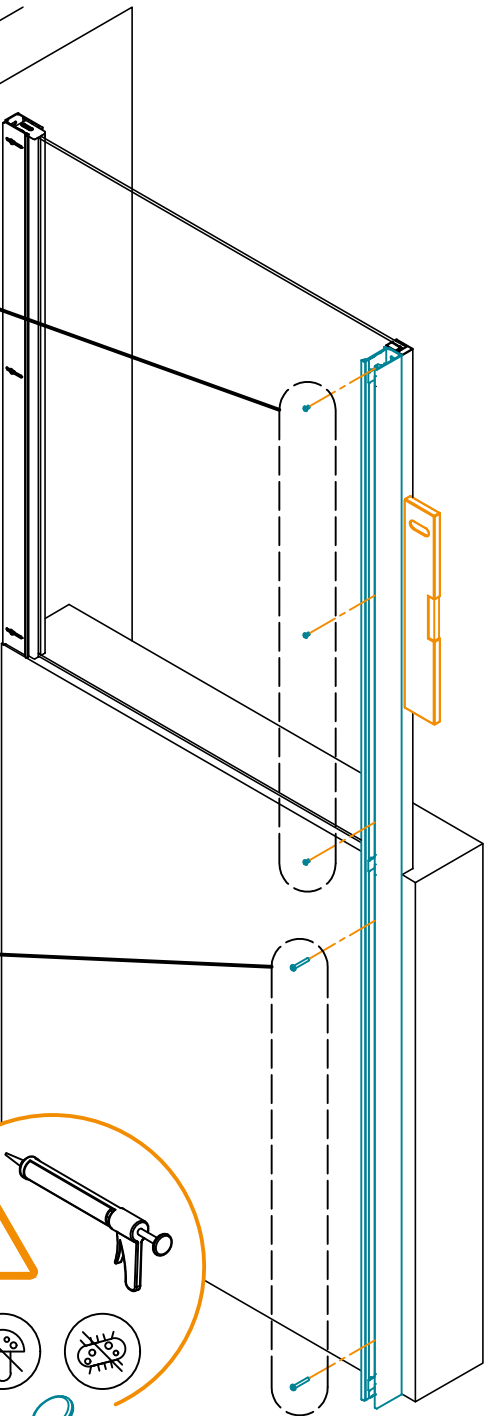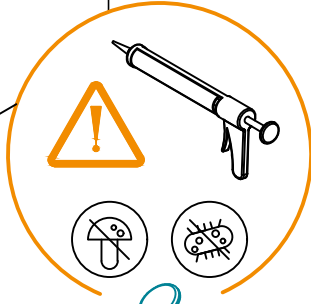





7.1 → 7.5

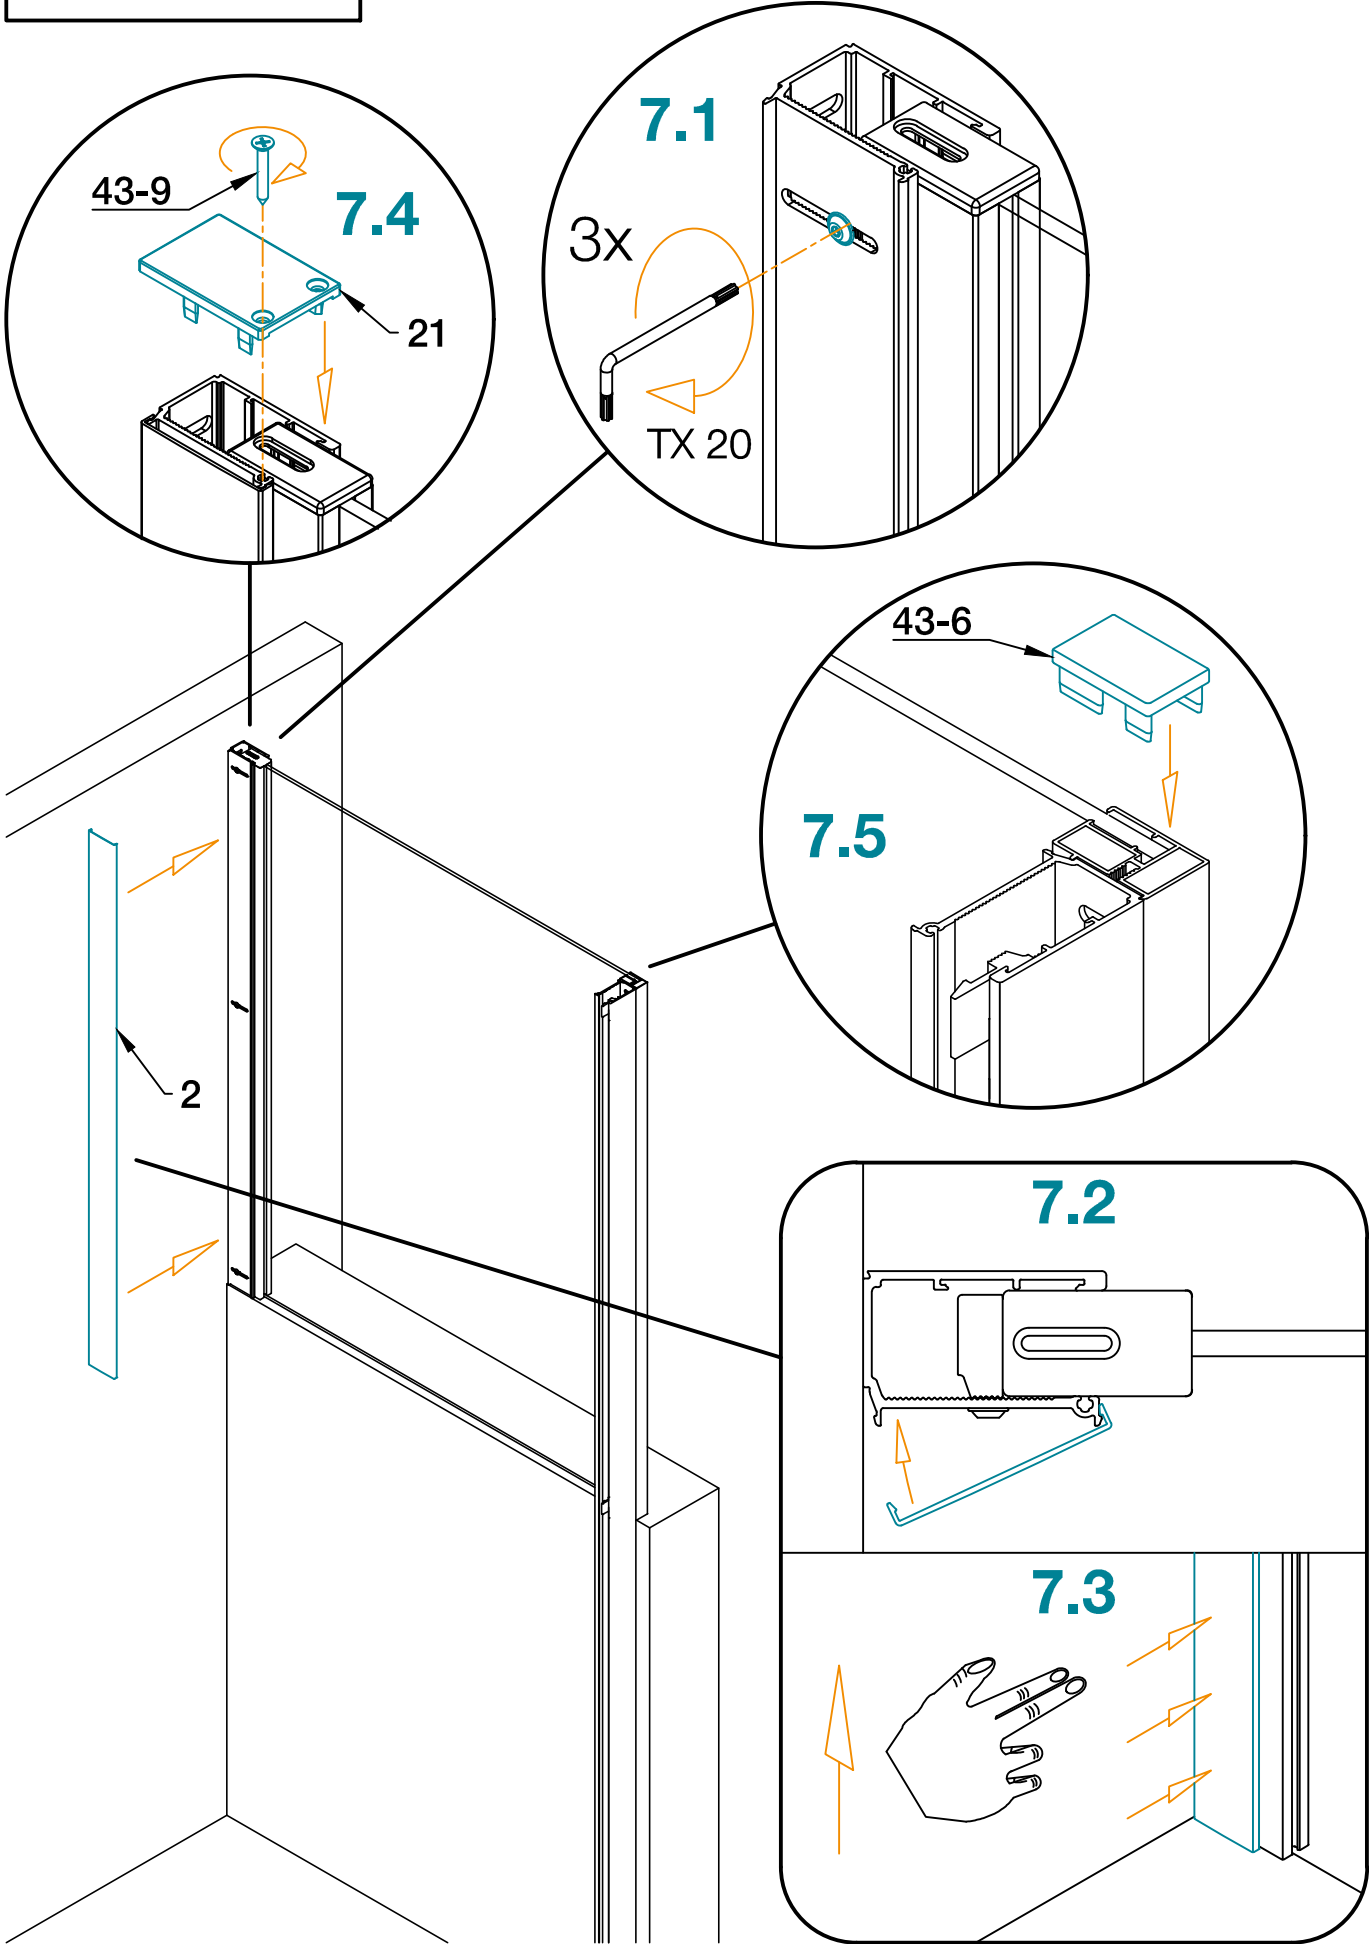


8.

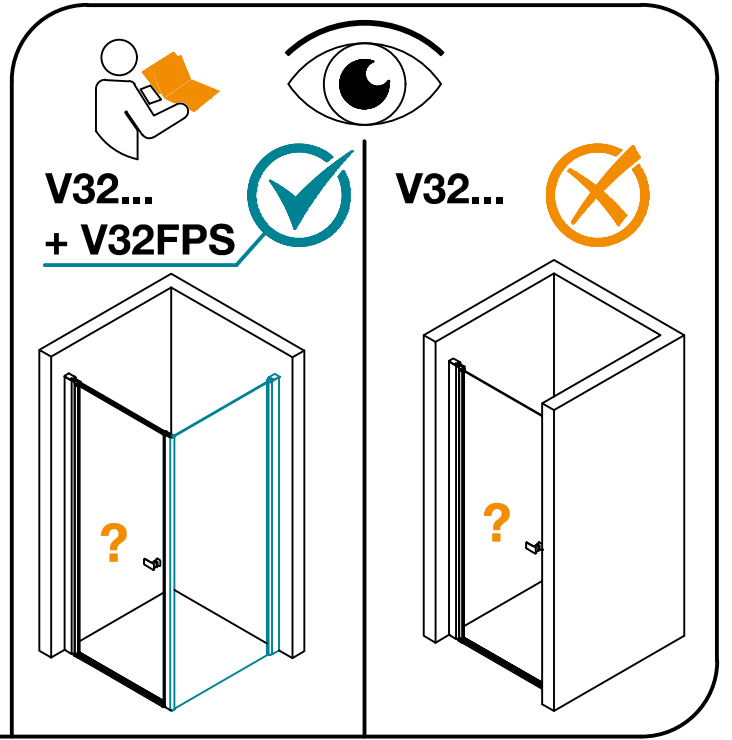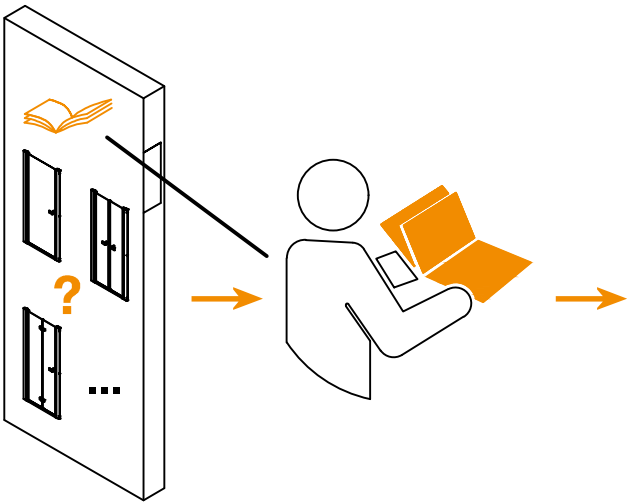

9.

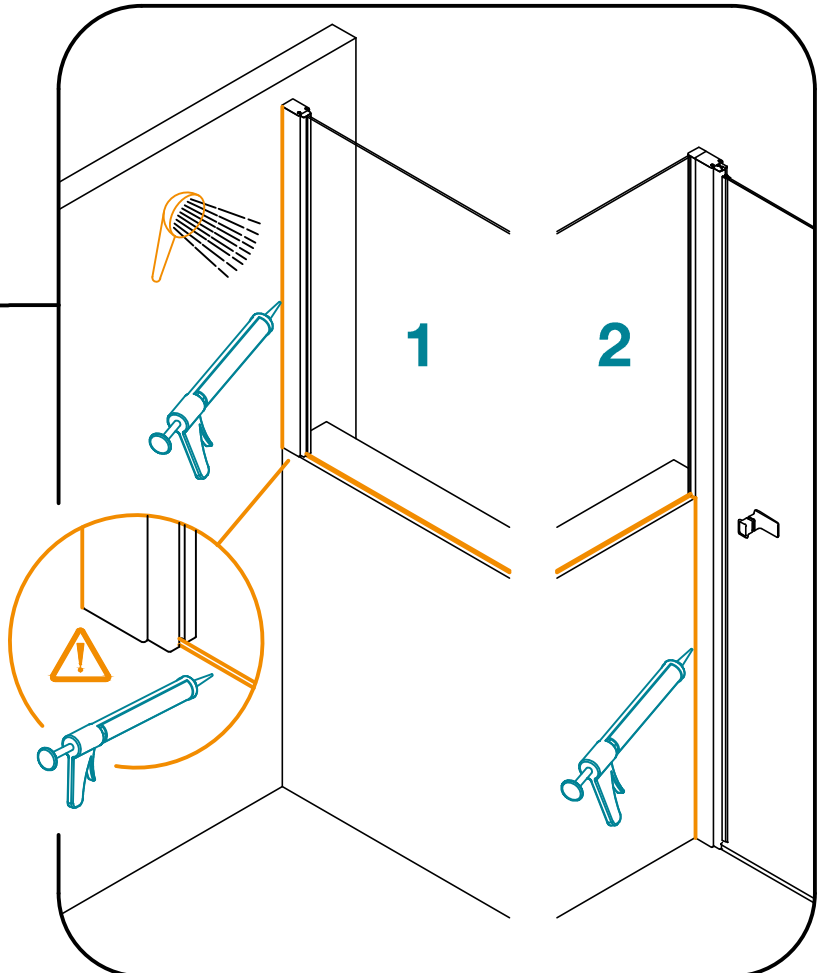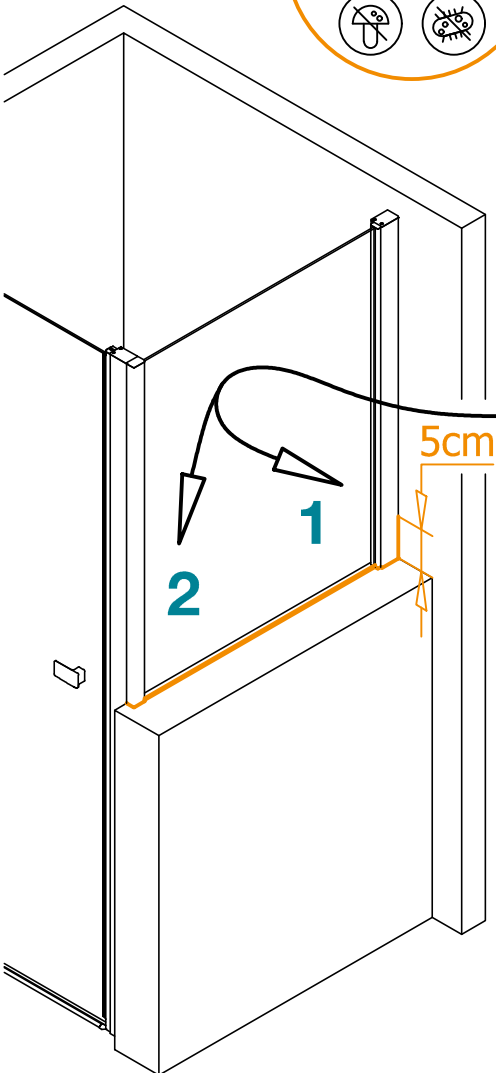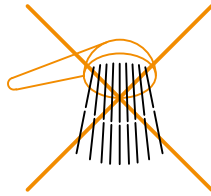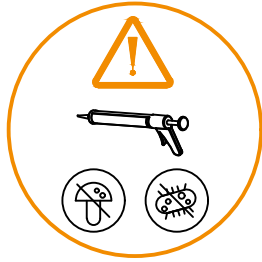

10

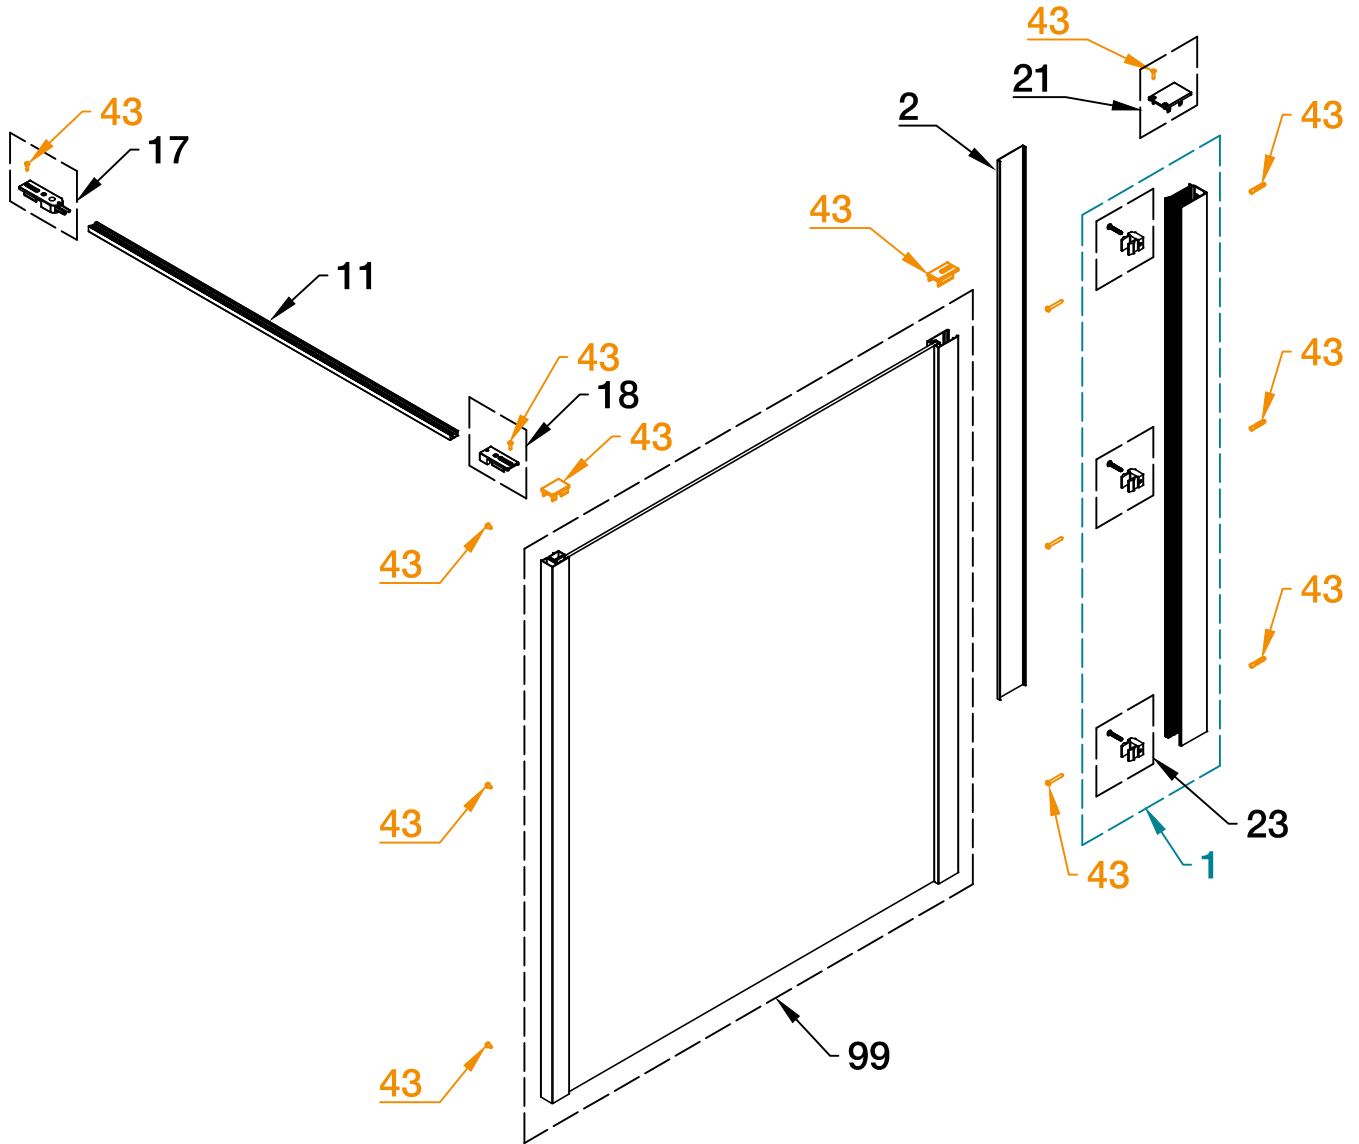

Pos.	KBN
1	*
2	*
11	YVG50504501250
17	YVGMT052510
18	YVGMT052610
21	*
23	YVG81406
38	*
39	*
40	*
41	YVGMT046310
42	YVGMT046410
43	YVGSMD24AC
99	*